
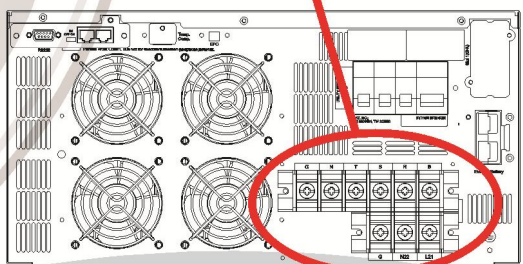
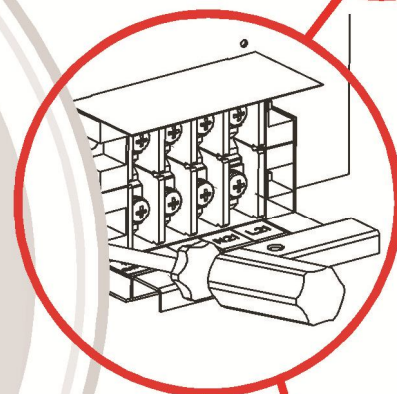
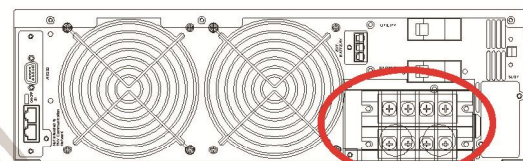
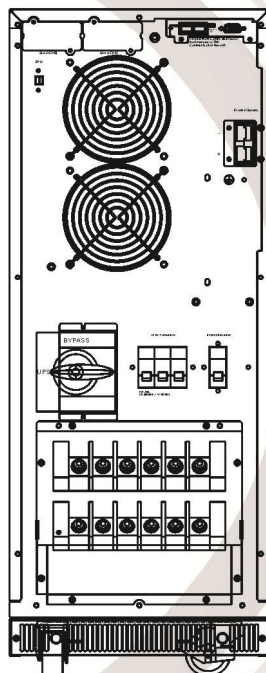
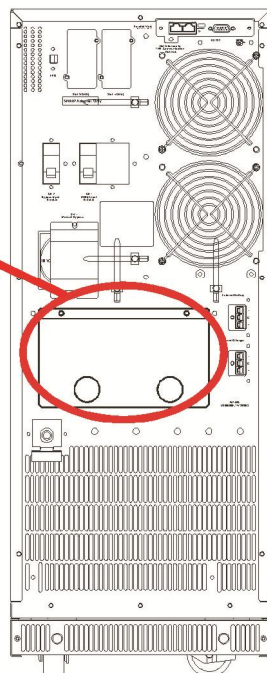
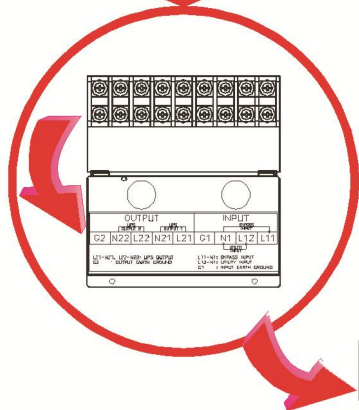


Before operating the unit, please read your User manual thoroughly and retain it for future reference.

1


Fully read these instruction before starting the procedure.

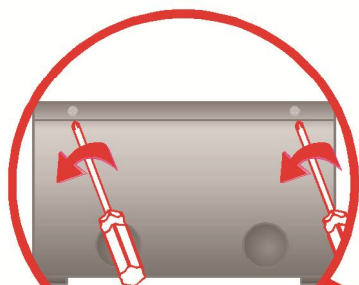






OUTPUT	INPUT
G2 N22 L22 N21 L21	G1 N1 L12 L11



For other configurations please see your user manual.

G1-G2: Input/output earth ground
N1-L11: Bypass input (L11 only with dual input, otherwise short L11 with L12)
N1-L12: Utility input
N22-L22: UPS output
N21-L21: UPS output (only with internal transformer)




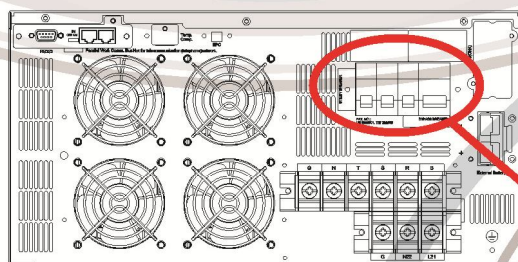


2


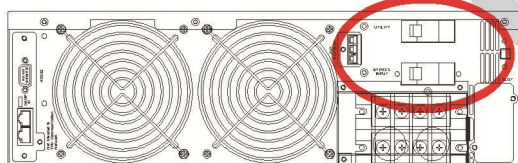
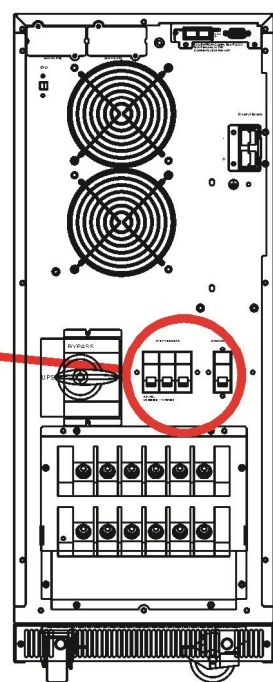
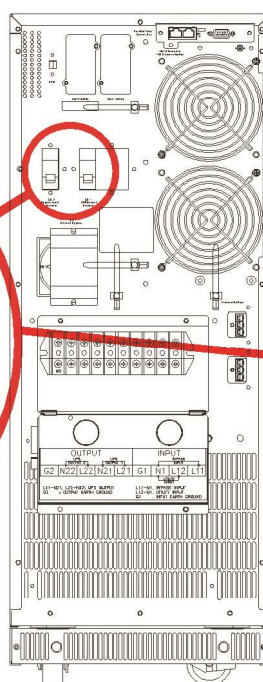
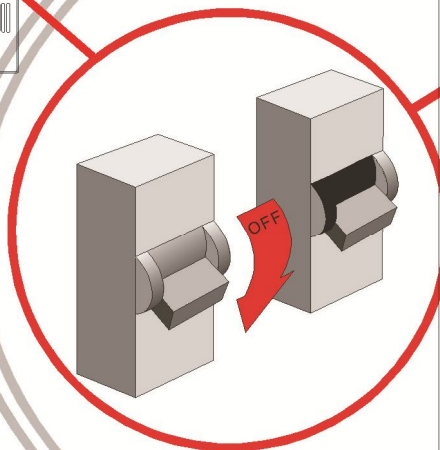
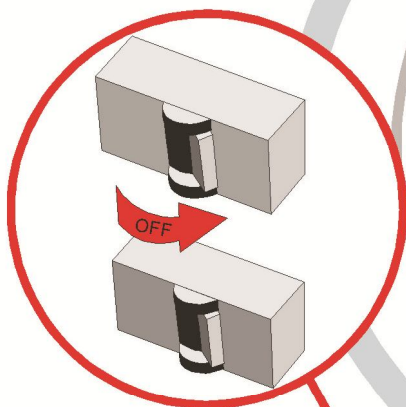


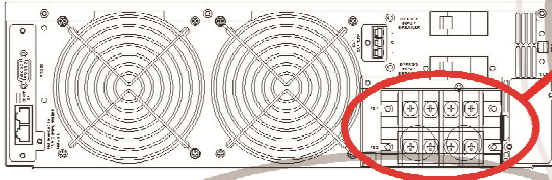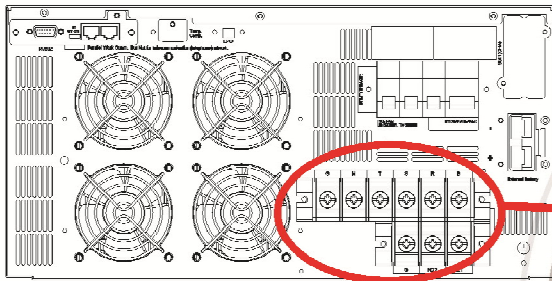

3

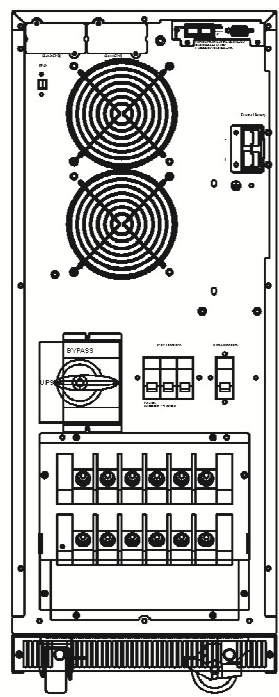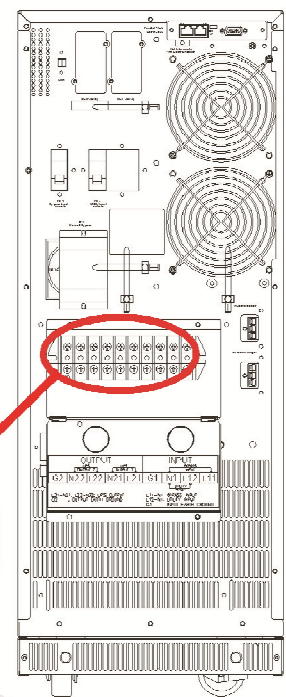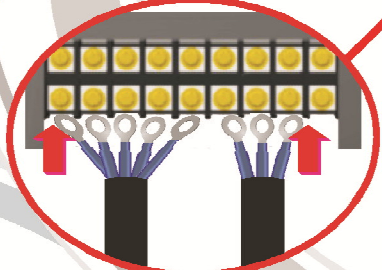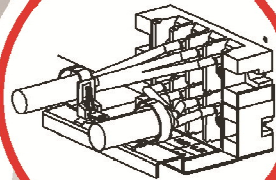

4

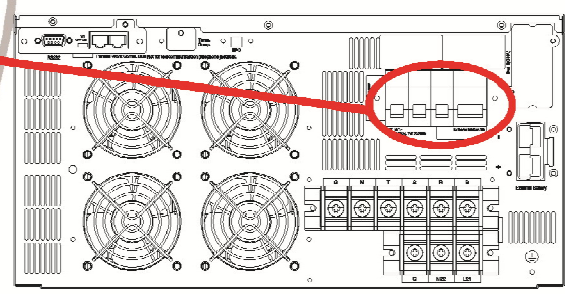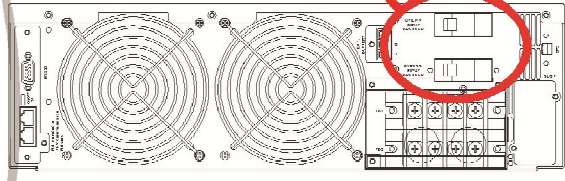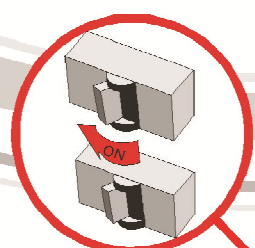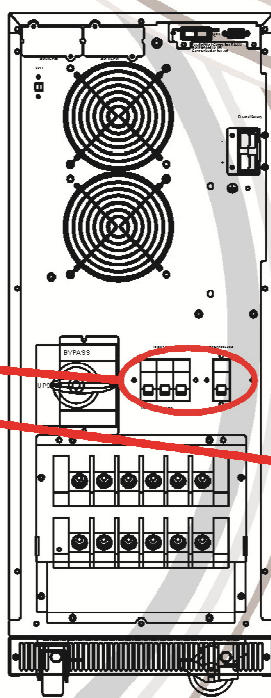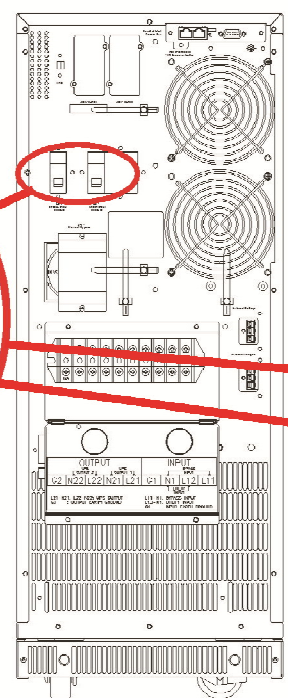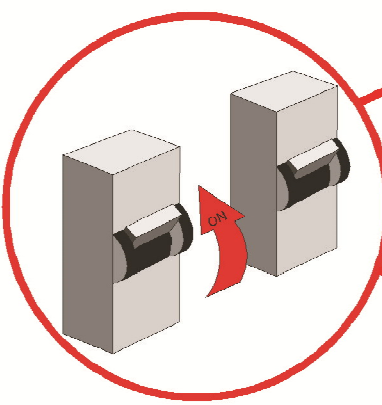

5

