



**Generating Set RENTAL BUILDING - diesel** 

## GE.AI3A.275/250.RB+011

1500 rpm - Threephase - 50Hz - 400V **Automatic Panel with AMF without ATS** 



## Standard equipment

## Canopy Soundproofing

Painting canopy (ral) in galvanized sheet steel Soundproofing with class 1 polyester material Handles with key lock and automatic closing Special baffles for air intake and air expulsion Inspection doors with hermetic gasket Automatic doorstop Externally and internally washable with sprayer

Residential exhaust system -35dB(A) Exhaust rain cap

## Fuel Supply

Single wall daily tank with 110% bunded base Plug & play fuel connections Bulk tank connections with 3 way valve Automatic shutdown system for low fuel level Fuel gauge Mechanical fuel gauge Increased fuel hatch for washing

## **A** Handling

Oversized lifting hook Base frame with anti-overturning forklift pockets Rubber bumpers

### Base Frame

Bunded base at 110% of fuel tank capacity Anti-vibrating mounting pads Battery compartment externally accessible for easy service

## Engine

High coolant temperature and low oil pressure shutdown

Oil pressure and coolant temperature gauge (only with qpe or +14 variant)

External oil drain points

Oil change pump

Engine liquids (oil and antifreeze)

**Tropicalized radiator** 

Rotating parts protection

Electronic speed governor











## Alternator

Avr automatic voltage regulator Impregnation for marine environment lp23

### Panel & connection

Emergency stop button Switch on panel board Rcd with adjustable current and excludible Tamperproof panel ip55

Male socket for battery charger and engine pre-heater (if provided) power supply

Cable output from side

Mccb open switch in the event of terminal box panel opening lp44 wiring

Start-up battery (pre-charged)

Plug & play connector for bus communication between controller (only variant +14)

5 sockets module with magnetothermal circuit breaker and general rcd

Grounding point

Total power terminal box

### Documentation

Ce conformity declaration User and maintenance manual Test report Wirings diagrams Ip 55 document pocket Exploded drawing with spare parts codes

### Normatives •

All generating sets are compliant to CE marking 2014/30/UE electromagnetic compatibility 2000/14/CE noise emission for outdoor use Factory-designed systems built according to ISO 9001:2015 CEI EN 60204-1:2018 - Electrical equipment of machines







## **Primary data**

General Information

Speed	RPM	1500
Frequency	Hz	50
PRP	KVA	250
Prp - prime power	KW	200,0
Ltp - standby power	KVA	275
Ltp - standby power	KW	220,0
Standard voltage	V	400/230
Current	Α	361,3
Cosfi	0,8	0,8
General electrical protection		
Circuit-breaker rated current	Α	400
Туре		Switch disconnector on panel board
Circuit-breaker poles	N	4P
Optional/notes circuit-breaker		Opening coil
Additional protection		Adjustable and excludable Differential protection
Protection device		Control module
Adjustments tripping set-point (id)	mA	30 - 5000
Adjustments tripping time (t)	sec.	0 - 30
Noise level +/- 3dB(A)		
LWA	dB(A)	91
Sound pressure level @ 7 mt	dB(A)	66
Sound pressure level @ 1 mt	dB(A)	75
Fuel Consumption		
Туре		diesel

Туре		diesel
Standard fuel tank capacity	lt	600
Autonomy @ 75% load	h	11
Fuel consumption at 100% load	lt/h	61
Fuel consumption at 75% load	lt/h	55
Fuel consumption at 50% load	lt/h	35,7

## General data

Rated capacity	Ah	2x180
Auxiliary voltage	V	24
Exhaust diameter	mm	140

## Weight and Dimensions

Dimensions (I x w x h)	cm	415x155x230
Weight with liquids (excluding optionals and fuel)	Kg (+/-3%)	3453







## Engine

	FPT
	C87TE3F
	Stage 3A
	Electronic
°C	50
Tipo	liquid (water + 50% Paraflu11)
Kwm	232
CV	315,2
Tipo	4 strokes
Tipo	Direct
Tipo	Turbo
N	6
	L
mm	117
mm	135
lt	8,704
	15W40-API CI-4/CH-4 ACEA E5-E7
%	<0,2% fuel consumption
lt	28
lt	63
	Tipo  Kwm  CV  Tipo  Tipo  N  mm  mm  It

## Alternat

### \* May vary based on stock availability. However, a primary brand will be used.

Factory		Stamford
Model		UCDI274K
Prime power prp 3ph+n	KVA	250
Voltage regulator (voltage accuracy)	+/- %	1
Poles	N°	4
Phases	N°	3+N
Standard windings connection		Star Series Star Series
Stator/rotor impregnation		H (Outdoor Temp 40°C)
Efficiency	%	92,7
Engine coupling		Elastic disk
Short circuit current		>= 300% (3In)
Protection degree	IP	23
Cooling system		Self ventilating
Maxium overspeed	rpm	2250
Waveform distortion	%	<5
Exciter		Diode bridge

## Standard operating environmental conditions


Ambient temperature	°C	25
Relative humidity	%	30
Max altitude	mt	1000





## **Control Systems on board QPE-C-OSC-250-RB**



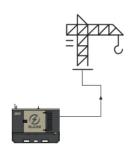

operating scheme - schema di funzionamento

## **QPE** Control panel

The QPE-C control panel represents the evolution of the panel for the control and management of the gen set. With its microprocessor logic it is able to meet any user requested features. The dual operation mode manual and automatic guarantees to every type of functionality protection, analysis and control of the generating set in order to make the management easy and efficient.

## Mechanical features

	Protection degree	IP	55
--	-------------------	----	----

## Battery charger

Model		ELCOS - CB1
Maximum output current	Α	2,5
Output dc voltage (selectable)	Vdc	12-24
Input ac voltage (selectable)	Vac	220-260
Frequency	Hz	50-60

## Sockets module

Protection	Туре	Differential Magnetothermal breakers
Differential sensivity	mA	30 (only for 16A and 32A)
Sockets		N. 1 CE Schuko 16A 230V
Sockets		N. 1 CE 2P+T 16A 230V
Sockets		N. 1 CE 3P+N+T 16A 400V
Sockets		N. 1 CE 3P+N+T 32A 400V
Sockets		N. 1 CE 3P+N+T 63A 400V
Male socket		N. 1 CE 2P+T 16A 230V

## Data Communication

Data connection port	RS-485
Communication protocol	Mod-bus RTU-8N1

# Remotable functions in terminal box

Gs start Gs lock
Genset contactor close/open command Mains contactor close/open command





Common alarm - dc output Gs start with key in off position (only in mrs mode) Management of the automatic fuel refilling system

Gs test without load Programmable output - volt free output

**Brand** 

Model

Operating mode



### Control Module



#### **Specifics**

### **Applications**

Emergency to the mains Stand-alone Construction site/rental Self-production

#### **ENGINE MEASURES**

Fuel tank level %

Engine oil pressure bar (1)

Engine coolant temperature °c (1)

Total run time

Partial run time

Hours to maintenance

Battery voltage

Battery charging voltage

Start-ups counter

Engine speed (2)

Engine oil temperature (2)

Cooler temperature (2)

Engine oil level (2)

Engine coolant level (2)

Engine coolant pressure (2)

Turbo pressure (2)

Fuel consumption (2)

Tank autonomy - hrs (5) Fuel remaining quatity (5)

Fuel used quantity (5)

#### **ALTERNATOR MEASURES**

Generator voltage I1, I2, I3 Generator voltage I1-n, I2-n, I3-n

Generator frequency

Generator current l1, l2, l3

Generator apparent power kva

Generator active power kw

Generator reactive power kvar

Generator accumulated power kwh

Power factor cosfi

### **MAINS MEASURES**

Mains voltage I1, I2, I3 Mains voltage I1-n, I2-n, I3-n

Mains frequency

### **COMMUNICATION PORTS**

Can-bus port

Rs485 port with mod-bus rtu communication

Rs232 port for display connection

Usb port for parameters saving and firmware update

#### **EQUIPMENT**

Microprocessor logic

Back-lit display

Programmable from display

16 event log

Multiple display languages

Stop button

Start button

Test button

Reset alarm button

Alarm mute button

Fuel transfer pump activation button

Glow-plug activation button

#### PRE-ALARMS/ ALARMS

Common alarm

Fuel reserve (pre-alarm)

Low fuel level (alarm)

Tank overflow

Charge alternator failed (dinamo)

Low oil pressure (pre-alarm) (1)

Low oil pressure (alarm)

Oil sensor failed (alarm)

High coolant temperature (pre-alarm) (1)

High coolant temperature (alarm)

Low coolant temperature (pre-alarm)

Low water level (1)

Water in fuel (1) Battery undervoltage

Battery overvoltage

Gs failure to start

Gs failure to stop

Can-bus failure

No can-bus communication

Genset overload I1, I2, I3 phases

Genset short circuit

Genset overvoltage

Genset undervoltage

Genset high frequency

Genset low frequency Overspeed

Reverse power

Earth fault (pre-alarm)

Earth fault (alarm) Block from password

Can communication failed

Maintenance request

Emergency button pressed

Remote emergency active Forced stop

External battery failed

Fuel theft

Genset negative phase sequence Mains negative phase sequence

Fuel theft protection

### VISUALIZATIONS ON CONTROL

AMF - MRS

**ELCOS** 

MC4

### MODULE/DISPLAY

Pre-alarms

Alarms

**Engine** measures

Alternator measures

Mains measures

Date and time

Operating mode

Genset status Mains status

Mains contactor status

Genset contactor status

Digital input and output status

Grounding current ma (3)

Grounding current threshold ma (3)

Delay time of differential protection (3)

Glow plugs status

#### **CONTROL MODULE FUNCTIONS**

Automatic start and stop when the mains fails (7)

Remote start and stop

Remote start and stop with key in off position

Manual start and stop

Emergency stop button on panel board

Remote emergency stop

Remote lock

Remote test without load

Remote test on load

Scheduled start-ups

Modbus commands (start, stop, reset, test)

### **CONTROL MODULE SPECIAL FUNCTIONS**

(on demand) Automatic charging of an external battery

Dummy load (4) Load shedding (4)

Redundant starter motor management

Fuel monitoring

Gs battery load test

Idle mode

Service phone number indication

Variable speed generator

Master / slave mode





### **OPTIONAL**

Canopy Soundproofing

Canopy customized painting (ral)
Anti-sand louvre
High resistence painting for harsh environment condition

Exhaust

Spark arrestor

Fuel Supply

Automatic fuel refilling system on board Fuel refilling from outside with tank overflow lamp

Handling

On road trailer Off road trailer

Engine

Engine pre-heater 230v Engine liquids + 50°c, - 40°c (oil and antifreeze) Automatic refilling oil system 1000 working hours spare parts kit Cyclone air filter Redundant start-up battery kit Alternator

Avr pre-arranged for parallel

Stator windings thermistors - pt100 - in the alternator box (not managed)

Bearing thermistor - pt100 - in the alternator box (not managed) Anti-condensation heater

Double bearing

Three-phase sensing avr

Bi-phase sensing avr

Panel & connection

Automatic transfer switch (qc)

Utf energy meter with arcudi terminal

Internal led lighting system into terminal box

Internal led lighting system for canopy

Siren and generator status lights kit

High efficiency start-up battery (pre-charged)

Additional sockets for socket module (max 4 sockets)

Genset start/stop device on load demand

**Grounding points** 

Power locks

MC4 optional

Telemonitoring with software

Remote panel

Rs485/usb converter

Rs485/lan converter

16 relais card (volt free output)

Gms modem - sms remote management

Radiocontrol

Gsm remote control system with web application without sim

card


Gps tracking system

### **PRP**

Engines of this rating provide unlimited hours of usage in a variable load application. The average load factor should not exceed 70% of the engine's prime power rating with a maximum number of 500 operational hours at 100% prime power rating. An overload capability of 10% is available, however, is limited to a period of 1 in every 12 hours

### LTP

Limited-time running power is defined as the maximum power available, under the agreed operating conditions, for which the generating set is capable of delivering for up to 500h of operation per year with the maintenance intervals. The overload is not allowed.

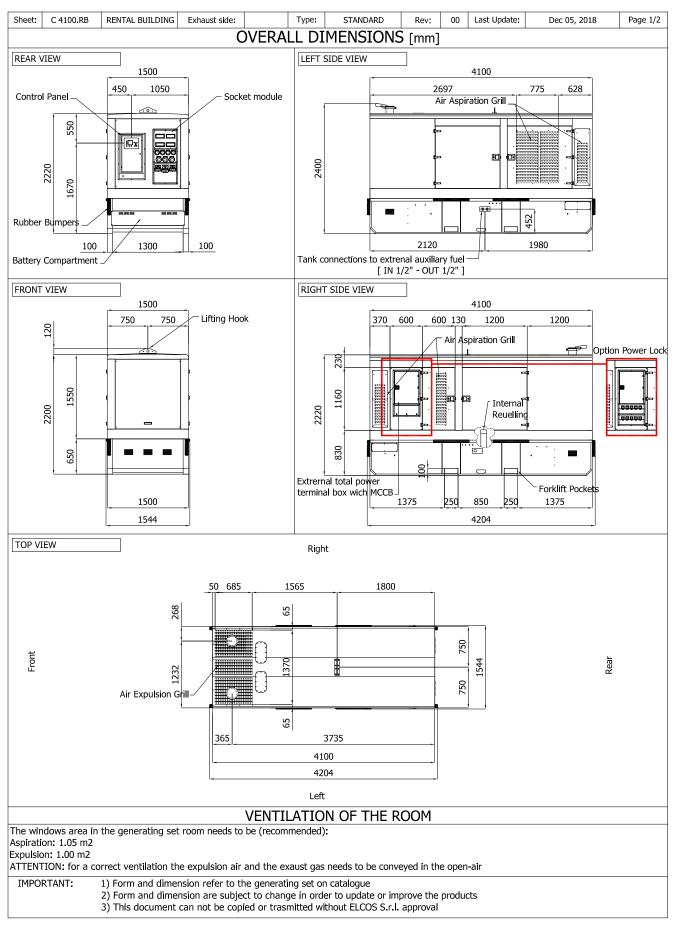

GE.Al3A.275/250.RB+011

