



Image for demonstration purposes

Generating Set Base Frame - diesel

GE.CU.176/160.BF+011

1500 rpm - Threephase - 50Hz - 400V Automatic Panel with AMF without ATS



Standard equipment

Exhaust

Exhaust manifold protection Silenced muffler -15dB(A)

Fuel Supply

Single wall daily tank with bunded base Automatic shutdown system for low fuel level Fuel gauge

A Handling

Base frame with anti-overturning forklift pockets

Base Frame

Bunded base at 110% of fuel tank capacity Anti-vibrating mounting pads

Engine

High coolant temperature and low oil pressure shutdown

Oil pressure and coolant temperature gauge (only with gpe or +14 variant)

External oil drain points

Engine liquids (oil and antifreeze)

Tropicalized radiator

Rotating parts protection

Electronic speed governor

Radiator level sensor

Alternator

Avr automatic voltage regulator Impregnation for marine environment

Panel & connection

Emergency stop button Magnetothermal circuit breaker on alternator board Cable output from side lp44 wiring Start-up battery (pre-charged) Grounding point

Documentation

Ce conformity declaration User and maintenance manual Wirings diagrams

Normatives

All generating sets are compliant to CE marking 2014/30/UE electromagnetic compatibility 2000/14/CE noise emission for outdoor use Factory-designed systems built according to ISO 9001:2015 CEI EN 60204-1:2018 - Electrical equipment of machines















Primary data

Dimensions (l x w x h)

Weight with liquids (excluding optionals and fuel)

Speed	RPM	1500
Frequency	Hz	50
PRP	KVA	155
Prp - prime power	KW	124,0
Ltp - standby power	KVA	170
Ltp - standby power	KW	136,0
Standard voltage	V	400/230
Current	Α	224,0
Cosfi	0,8	0,8
General electrical protection		
Circuit-breaker rated current	A	250
Type		Magnetothermal switch on the alternator boar
Circuit-breaker poles	N	4P
Fuel Consumption Type		diesel
Standard fuel tank capacity	lt	250
Autonomy @ 75% load	h	9
Fuel consumption at 100% load	lt/h	37
Fuel consumption at 75% load	lt/h	29
Fuel consumption at 50% load	lt/h	19
General data		
	Ah	1x120
Rated capacity	V	12
	V	
	°C	517
Auxiliary voltage		517 520

cm

Kg (+/-3%)

270x120x180

1621







Engine

Factory		Cummins
Model		6BTAA5.9G7
Emissions stage		Stage 0
Speed governor		Electronic
Radiator	°C	50
Cooling	Tipo	liquid (water + 50% Paraflu11)
Active net power	Kwm	135
Nominal net power	CV	183,4
Cycle	Tipo	4 strokes
Injection	Tipo	Direct
Aspiration	Tipo	Turbo
Numbers of cylinders	N	6
Cylinders arrangement		L
Bore	mm	102
Stroke	mm	120
Total displacement	lt	5,88
Engine oil features		15W40-API CI-4/CH-4 ACEA E5-E7
Total oil capacity	lt	16,4
Total coolant capacity	lt	21,4

Alternator

$\ensuremath{^{*}}$ May vary based on stock availability. However, a primary brand will be used.

Factory		Stamford
Model		UCI274F
Prime power prp 3ph+n	KVA	160
Voltage regulator (voltage accuracy)	+/- %	1
Poles	N°	4
Phases	N°	3+N
Standard windings connection		Star Series
Stator/rotor impregnation		H (Outdoor Temp 40°C)
Efficiency	%	92,3
Engine coupling		Elastic disk
Short circuit current		>= 300% (3In)
Protection degree	IP	23
Cooling system		Self ventilating
Maxium overspeed	rpm	2250
Waveform distortion	%	<5
Exciter		Diode bridge

Standard operating environmental conditions

Ambient temperature	°C	25
Relative humidity	%	30
Max altitude	mt	1000






Control Systems on board QPE-C-VSC-BF





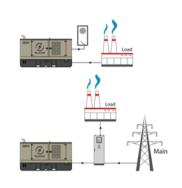

operating scheme - schema di funzionamento

The QPE-C control panel represents the evolution of the panel for the control and management of the gen set. With its microprocessor logic it is able to meet any user requested features. The dual operation mode manual and automatic guarantees to every type of functionality protection, analysis and control of the generating set in order to make the managment easy and efficient. Variant without transfer switch on board. ATS panel type QC as optional. The panel manages the QC panels directly or any other ATS panel.

Mechanical features

Duatastian dagge	ID	
Protection degree	IP	55

Battery charger

Model		ELCOS - CB1
Maximum output current	Α	2,5
Output dc voltage (selectable)	Vdc	12-24
Input ac voltage (selectable)	Vac	220-260
Frequency	Hz	50-60

Data Communication

Data connection port	RS-485
Communication protocol	Mod-bus RTU-8N1

Remotable functions in terminal box

Genset contactor close/open command Common alarm - dc output Gs start with key in off position (only in mrs mode) Management of the automatic fuel refilling system Gs lock Mains contactor close/open command Gs test without load Programmable output - volt free output









Specifics

Applications

Emergency to the mains Stand-alone Construction site/rental Self-production

ENGINE MEASURES

Fuel tank level % Engine oil pressure bar (1) Engine coolant temperature °c (1)

Total run time Partial run time

Hours to maintenance Battery voltage

Battery charging voltage

Start-ups counter

Engine speed (2)

Engine oil temperature (2)

Cooler temperature (2)

Engine oil level (2) Engine coolant level (2)

Engine coolant pressure (2)

Turbo pressure (2)

Fuel consumption (2)

Tank autonomy - hrs (5)

Fuel remaining quatity (5)

Fuel used quantity (5)

ALTERNATOR MEASURES

Generator voltage I1, I2, I3 Generator voltage I1-n, I2-n, I3-n

Generator frequency Generator current 11, 12, 13

Generator apparent power kva Generator active power kw

Generator reactive power kvar Generator accumulated power kwh

Power factor cosfi

MAINS MEASURES

Mains voltage I1, I2, I3 Mains voltage I1-n, I2-n, I3-n Mains frequency

COMMUNICATION PORTS

Can-bus port

Rs485 port with mod-bus rtu communication Rs232 port for display connection

Usb port for parameters saving and firmware update

EQUIPMENT

Microprocessor logic Back-lit display

Programmable from display

16 event log

Multiple display languages

Stop button

Start button Test button

Reset alarm button

Alarm mute button

Fuel transfer pump activation button

Glow-plug activation button

PRE-ALARMS/ ALARMS

Common alarm

Fuel reserve (pre-alarm)

Low fuel level (alarm)

Tank overflow

Charge alternator failed (dinamo)

Low oil pressure (pre-alarm) (1)

Low oil pressure (alarm)

Oil sensor failed (alarm)

High coolant temperature (pre-alarm) (1)

High coolant temperature (alarm)

Low coolant temperature (pre-alarm)

Low water level (1) Water in fuel (1)

Battery undervoltage

Battery overvoltage

Gs failure to start

Gs failure to stop

Can-bus failure

No can-bus communication

Genset overload I1, I2, I3 phases

Genset short circuit Genset overvoltage

Genset undervoltage

Genset high frequency

Genset low frequency

Overspeed

Reverse power

Earth fault (pre-alarm) Earth fault (alarm)

Block from password

Can communication failed

Maintenance request

Emergency button pressed

Remote emergency active

Forced stop

External battery failed

Fuel theft

Genset negative phase sequence

Mains negative phase sequence

Fuel theft protection

VISUALIZATIONS ON CONTROL MODULE/DISPLAY

ELCOS

MC4 AMF - MRS

Pre-alarms

Alarms

Brand Model

Operating mode

Engine measures

Alternator measures

Mains measures

Date and time

Operating mode

Genset status

Mains status

Mains contactor status

Genset contactor status

Digital input and output status

Grounding current ma (3)

Grounding current threshold ma (3)

Delay time of differential protection (3)

Glow plugs status

CONTROL MODULE FUNCTIONS

Automatic start and stop when the mains fails (7)

Remote start and stop

Remote start and stop with key in off position

Manual start and stop

Emergency stop button on panel board

Remote emergency stop

Remote lock

Remote test without load

Remote test on load

Scheduled start-ups

Modbus commands (start, stop, reset, test)

CONTROL MODULE SPECIAL FUNCTIONS (on demand)

Automatic charging of an external battery

Dummy load (4)

Load shedding (4) Redundant starter motor management

Fuel monitoring Gs battery load test

Idle mode

Service phone number indication

Variable speed generator

Master / slave mode



OPTIONAL



Air inlet/outlet sound attenuator for room Soundproof container of various sizes

Exhaust

Exhaust flexible expansion joint External residential muffler Exhaust flexible pipe (fap) anti-particulate filter Exhaust catalyst (cat)

Fuel Supply

Bulk tank connections with 3 way valve Bulk tank connections Automatic fuel refilling system on board

Engine

Engine pre-heater 230vsuper hot
Oil change pump
Engine liquids + 50°c, - 40°c (oil and antifreeze)
Battery disconnector
Automatic refilling oil system
1000 working hours spare parts kit
Cyclone air filter
Redundant start-up battery kit

Alternator

Avr pre-arranged for parallel Stator windings thermistors - pt100 - in the alternator box (not

Bearing thermistor - pt100 - in the alternator box (not managed) Anti-condensation heater

Double bearing

Three-phase sensing avr

Bi-phase sensing avr

Panel & connection

Rcd with adjustable current and excludible Automatic transfer switch (qc) Utf energy meter with arcudi terminal Tamperproof panel ip55

MC4 optional

Telemonitoring with software
Remote panel
Rs485/usb converter
Rs485/lan converter
16 relais card (volt free output)
Gms modem - sms remote management
Radiocontrol
Gsm remote control system with web application without sim card
Gps tracking system

PRP


Engines of this rating provide unlimited hours of usage in a variable load application. The average load factor should not exceed 70% of the engine's prime power rating with a maximum number of 500 operational hours at 100% prime power rating. An overload capability of 10% is available, however, is limited to a period of 1 in every 12 hours

LTP

Limited-time running power is defined as the maximum power available, under the agreed operating conditions, for which the generating set is capable of delivering for up to 500h of operation per year with the maintenance intervals. The overload is not allowed.




GE.CU.176/160.BF+011

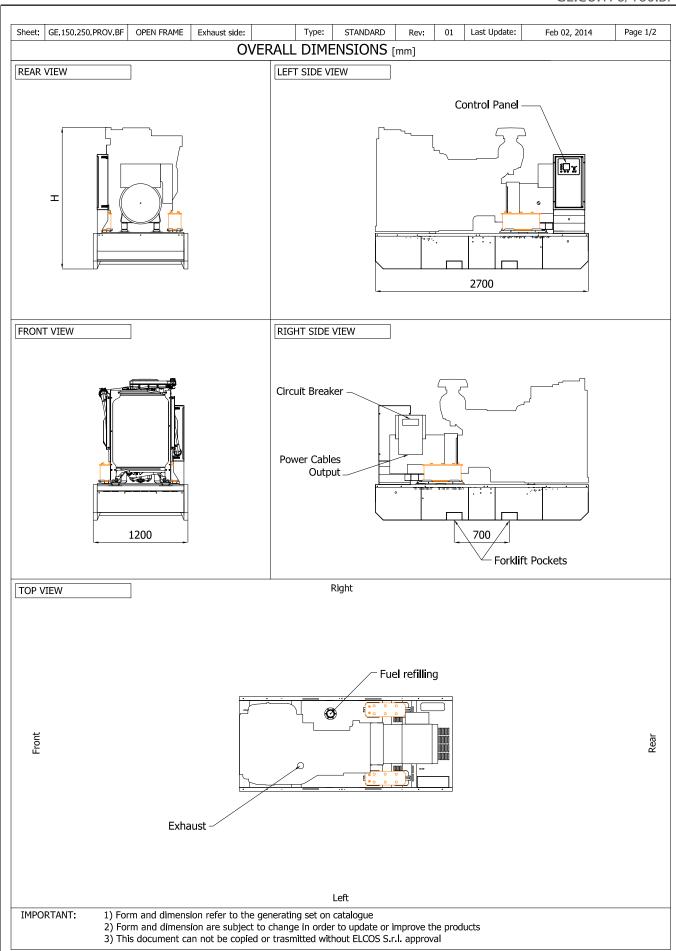





GE.CU.176/160.BF+011

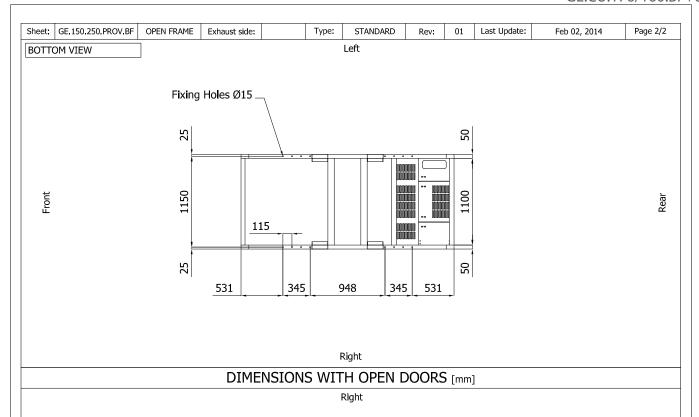

Front

Left

VENTILATION OF THE ROOM

The windows area in the generating set room needs to be (recommended):

Aspiration: on request Expulsion: on request

ATTENTION: for a correct ventilation the expulsion air and the exaust gas needs to be conveyed in the open-air

IMPORTANT:

- 1) Form and dimension refer to the generating set on catalogue
- 2) Form and dimension are subject to change in order to update or improve the products3) This document can not be copied or trasmitted without ELCOS S.r.I. approval

Rear