





**Generating Set SUPERSILENT - diesel** 

# GE.VO.715/650.SS+011

1500 rpm - Threephase - 50Hz - 400V Automatic Panel with AMF without ATS



Image for demonstration purposes

# **Standard equipment**

# Canopy Soundproofing

Soundproofing with class 1 polyester material Handles with key lock and automatic closing Special baffles for air intake and air expulsion Inspection doors for controls and maintenance

# Exhaust

Exhaust rain cap Exhaust manifold protection Insulated exhaust pipes Internal residential muffler - 35dB(A)

### Fuel Supply

Single wall daily tank with bunded base Automatic shutdown system for low fuel level Fuel gauge

### Handling

N.2 lifting hooks integrated into the bearing structure

### Base Frame

Bunded base at 110% of fuel tank capacity Anti-vibrating mounting pads Battery compartment externally accessible for easy service

# Engine

Engine pre-heater 230v

High coolant temperature and low oil pressure shutdown

Oil pressure and coolant temperature gauge (only with qpe or +14 variant)

Engine liquids (oil and antifreeze)

Tropicalized radiator

Rotating parts protection

Electronic speed governor

#### Alternator

Avr automatic voltage regulator Avr pre-arranged for parallel Impregnation for marine environment

# Panel & connection

### Emergency stop button

Magnetothermal circuit breaker on alternator board Tamperproof panel ip55 Cable output from side lp44 wiring Start-up battery (pre-charged) Grounding point

### Documentation

Ce conformity declaration User and maintenance manual Wirings diagrams

### Normatives

All generating sets are compliant to CE marking 2014/30/UE electromagnetic compatibility 2000/14/CE noise emission for outdoor use Factory-designed systems built according to ISO 9001:2015 CEI EN 60204-1:2018 - Electrical equipment of machines















# **Primary data**

General Information  Speed	RPM	1500
Frequency	Hz	50
PRP	KVA	650
Prp - prime power	KW	520,0
Ltp - standby power	KVA	715
Ltp - standby power	KW	572,0
Standard voltage	V	400/230
Current	А	939,3
Cosfi	0,8	0,8
General electrical protection		
Circuit-breaker rated current	А	1000
Туре		Magnetothermal switch on the alternator board
Circuit-breaker poles	N	4P
LWA	dB(A)	97
Sound pressure level @ 7 mt	dB(A)	72
Sound pressure level @ 1 mt	dB(A)	72 81
Sound pressure level @ 1 mt  Fuel Consumption		81
Sound pressure level @ 1 mt  Fuel Consumption  Type	dB(A)	81 diesel
Fuel Consumption Type Standard fuel tank capacity Autonomy @ 75% load	dB(A)	81 diesel 1150
Sound pressure level @ 1 mt  Fuel Consumption  Type  Standard fuel tank capacity  Autonomy @ 75% load  Fuel consumption at 100% load	dB(A)  It  h	81 diesel 1150
Sound pressure level @ 1 mt  Fuel Consumption  Type  Standard fuel tank capacity	dB(A)  It  h  It/h	81 diesel 1150 12 130
Sound pressure level @ 1 mt  Fuel Consumption  Type  Standard fuel tank capacity  Autonomy @ 75% load  Fuel consumption at 100% load  Fuel consumption at 75% load  Fuel consumption at 50% load	lt h lt/h lt/h	81  diesel  1150  12  130  100
Fuel Consumption  Type  Standard fuel tank capacity  Autonomy @ 75% load  Fuel consumption at 100% load  Fuel consumption at 75% load  Fuel consumption at 50% load  Fuel consumption at 50% load	lt h lt/h lt/h	81  diesel  1150  12  130  100
Sound pressure level @ 1 mt  Fuel Consumption  Type  Standard fuel tank capacity  Autonomy @ 75% load  Fuel consumption at 100% load  Fuel consumption at 75% load  Fuel consumption at 50% load	lt h lt/h lt/h	81  diesel  1150  12  130  100  70
Fuel Consumption  Type  Standard fuel tank capacity  Autonomy @ 75% load  Fuel consumption at 100% load  Fuel consumption at 75% load  Fuel consumption at 50% load  Fuel consumption at 50% load	It h It/h It/h It/h Ah	diesel 1150 12 130 100 70
Fuel Consumption  Type  Standard fuel tank capacity  Autonomy @ 75% load  Fuel consumption at 100% load  Fuel consumption at 75% load  Fuel consumption at 50% load  Fuel consumption at 50% load  W General data  Rated capacity  Auxiliary voltage  Exhaust diameter	dB(A)  It h It/h It/h It/h V	81  diesel  1150  12  130  100  70  2x180  24
Fuel Consumption  Type  Standard fuel tank capacity  Autonomy @ 75% load  Fuel consumption at 100% load  Fuel consumption at 75% load  Fuel consumption at 50% load  Fuel consumption at 50% load  Auxiliary voltage	dB(A)  It h It/h It/h It/h V	81  diesel  1150  12  130  100  70  2x180  24





# Engine

Factory		Volvo
Model		TWD 1644 GE
Emissions stage		Stage 2
Speed governor		Electronic
Radiator	°C	50
Cooling	Tipo	liquid (water + 50% Paraflu11)
Active net power	Kwm	554
Nominal net power	CV	752
Cycle	Tipo	4 strokes
Injection	Тіро	Direct
Aspiration	Тіро	Turbo
Numbers of cylinders	N	6
Cylinders arrangement		L
Bore	mm	144
Stroke	mm	165
Total displacement	lt .	16,115
Engine oil features		15W40-API CI-4/CH-4 ACEA E5-E7
Total oil capacity	lt	58
Total coolant capacity	lt	98
Iso 8528-5 class		G3

# Alternato

### \* May vary based on stock availability. However, a primary brand will be used.

Factory		Stamford
Model		HCI544F
Prime power prp 3ph+n	KVA	670
Voltage regulator (voltage accuracy)	+/- %	1
Poles	N°	4
Phases	N°	3+N
Standard windings connection		Star Series Star Series
Stator/rotor impregnation		H (Outdoor Temp 40°C)
Efficiency	%	95
Engine coupling		Elastic disk
Short circuit current		>= 300% (3In)
Protection degree	IP	23
Cooling system		Self ventilating
Maxium overspeed	rpm	2250
Waveform distortion	%	<5
Exciter		Diode bridge

# Standard operating environmental conditions


Ambient temperature	°C	25
Relative humidity	%	30
Max altitude	mt	1000



GE.VO.715/650.SS+011

# **Control Systems on board QPE-C-VSC**



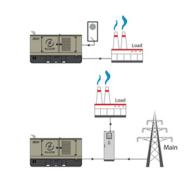

operating scheme - schema di funzionamento

# 

The QPE-C control panel represents the evolution of the panel for the control and management of the gen set. With its microprocessor logic it is able to meet any user requested features. The dual operation mode manual and automatic guarantees to every type of functionality protection, analysis and control of the generating set in order to make the management easy and efficient. Variant without transfer switch on board. ATS panel type QC as optional. The panel manages the QC panels directly or any other ATS panel.

# Mechanical features

|--|

# Battery charger

Model		ELCOS - CB1
Maximum output current	Α	2,5
Output dc voltage (selectable)	Vdc	12-24
Input ac voltage (selectable)	Vac	220-260
Frequency	Hz	50-60

# Data Communication

Data connection port	RS-485
Communication protocol	Mod-bus RTU-8N1

# Remotable functions in terminal box

Gs start
Genset contactor close/open command
Common alarm - dc output
Gs start with key in off position (only in mrs mode)
Management of the automatic fuel refilling system

Gs lock
Mains contactor close/open command
Gs test without load
Programmable output - volt free output









#### **Specifics**

#### **Applications**

Emergency to the mains Stand-alone Construction site/rental Self-production

#### **ENGINE MEASURES**

Fuel tank level % Engine oil pressure bar (1) Engine coolant temperature °c (1) Total run time

Partial run time Hours to maintenance

Battery voltage

Battery charging voltage Start-ups counter

Engine speed (2) Engine oil temperature (2)

Cooler temperature (2)

Engine oil level (2) Engine coolant level (2)

Engine coolant pressure (2)

Turbo pressure (2) Fuel consumption (2)

Tank autonomy - hrs (5) Fuel remaining quatity (5)

Fuel used quantity (5)

#### **ALTERNATOR MEASURES**

Generator voltage I1, I2, I3 Generator voltage I1-n, I2-n, I3-n Generator frequency Generator current 11, 12, 13 Generator apparent power kva Generator active power kw Generator reactive power kvar Generator accumulated power kwh

### Power factor cosfi **MAINS MEASURES**

Mains voltage I1, I2, I3 Mains voltage I1-n, I2-n, I3-n Mains frequency

#### **COMMUNICATION PORTS**

Can-bus port

Rs485 port with mod-bus rtu communication Rs232 port for display connection

Usb port for parameters saving and firmware update

#### **EQUIPMENT**

Microprocessor logic Back-lit display

Programmable from display

16 event log

Multiple display languages

Stop button Start button Test button

Reset alarm button Alarm mute button

Fuel transfer pump activation button

Glow-plug activation button

#### PRE-ALARMS/ ALARMS

Common alarm

Fuel reserve (pre-alarm)

Low fuel level (alarm)

Tank overflow

Charge alternator failed (dinamo)

Low oil pressure (pre-alarm) (1)

Low oil pressure (alarm)

Oil sensor failed (alarm)

High coolant temperature (pre-alarm) (1)

High coolant temperature (alarm)

Low coolant temperature (pre-alarm)

Low water level (1) Water in fuel (1) Battery undervoltage Battery overvoltage Gs failure to start Gs failure to stop Can-bus failure

No can-bus communication Genset overload I1, I2, I3 phases

Genset short circuit Genset overvoltage Genset undervoltage Genset high frequency Genset low frequency

Overspeed Reverse power Earth fault (pre-alarm) Earth fault (alarm)

Block from password Can communication failed Maintenance request

Emergency button pressed Remote emergency active

Forced stop

External battery failed

Fuel theft

Genset negative phase sequence Mains negative phase sequence

Fuel theft protection

#### VISUALIZATIONS ON CONTROL MODULE/DISPLAY

**ELCOS** 

MC4 AMF - MRS

Pre-alarms

Alarms

**Brand** Model

Operating mode

Engine measures Alternator measures Mains measures

Date and time Operating mode Genset status

Mains status

Mains contactor status Genset contactor status

Digital input and output status

Grounding current ma (3)

Grounding current threshold ma (3)

Delay time of differential protection (3)

Glow plugs status

#### **CONTROL MODULE FUNCTIONS**

Automatic start and stop when the mains fails (7)

Remote start and stop

Remote start and stop with key in off position

Manual start and stop

Emergency stop button on panel board

Remote emergency stop

Remote lock

Remote test without load Remote test on load

Scheduled start-ups

Modbus commands (start, stop, reset, test)

#### **CONTROL MODULE SPECIAL FUNCTIONS** (on demand)

Automatic charging of an external battery

Dummy load (4) Load shedding (4)

Redundant starter motor management

Fuel monitoring Gs battery load test Idle mode

Service phone number indication

Variable speed generator

Master / slave mode



### **OPTIONAL**

# Canopy Soundproofing

Canopy customized painting (ral)
Double soundproofing -2 dB(A) @ 7 mt
Lift-off doors kit
lp 43 conveyors

### Exhaust

Exhaust pipe
Exhaust flexible expansion joint
Exhaust flexible pipe
(fap) anti-particulate filter
Exhaust catalyst (cat)

# Fuel Supply

Oversized tank
Fuel connections
Bulk tank connections with 3 way valve
Automatic fuel refilling system on board
Automatic fuel refilling system on trestle

# Engine

Engine pre-heater 230vsuper hot
Oil change pump
Engine liquids + 50°c, - 40°c (oil and antifreeze)
Battery disconnector
Automatic refilling oil system
Cyclone air filter
Redundant start-up battery kit

# Alternator

Stator windings thermistors - pt100 - in the alternator box (not managed)  $\,$ 

Bearing thermistor - pt100 - in the alternator box (not managed) Anti-condensation heater

Double bearing

Three-phase sensing avr Bi-phase sensing avr

### Panel & connection

Rcd with adjustable current and excludible Automatic transfer switch (qc) Utf energy meter with arcudi terminal 5 sockets module with magnetothermal circuit breaker and general rcd

# MC4 optional

Telemonitoring with software
Remote panel
Rs485/usb converter
Rs485/lan converter
16 relais card (volt free output)
Gms modem - sms remote management
Radiocontrol
Gsm remote control system with web application without sim card
Gps tracking system

### **PRP**


Engines of this rating provide unlimited hours of usage in a variable load application. The average load factor should not exceed 70% of the engine's prime power rating with a maximum number of 500 operational hours at 100% prime power rating. An overload capability of 10% is available, however, is limited to a period of 1 in every 12 hours

### LTP

Limited-time running power is defined as the maximum power available, under the agreed operating conditions, for which the generating set is capable of delivering for up to 500h of operation per year with the maintenance intervals. The overload is not allowed.



GE.VO.715/650.SS+011

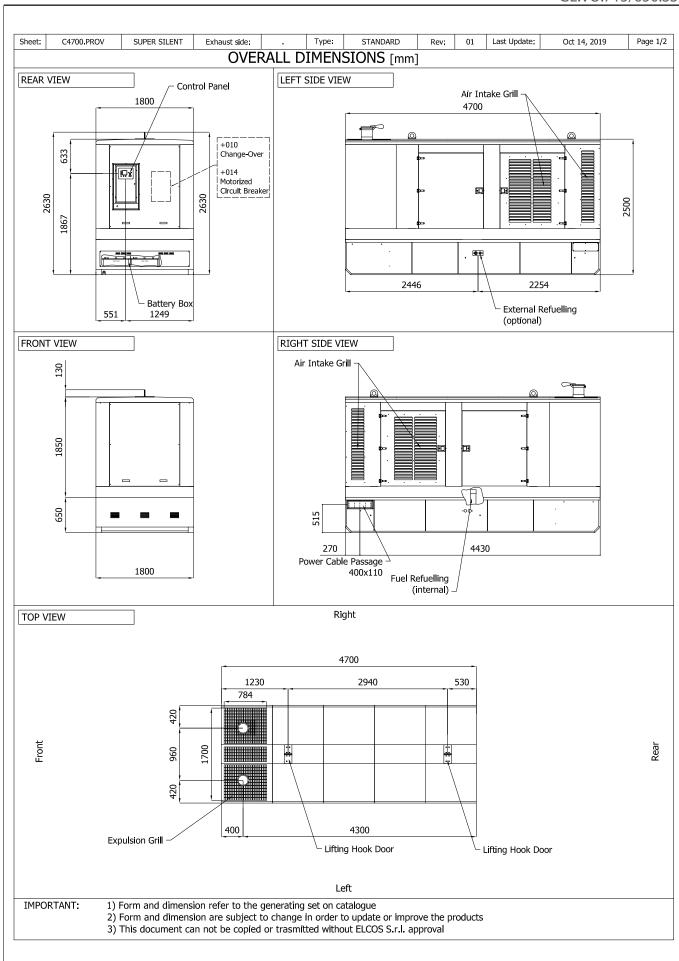





GE.VO.715/650.SS+011

